

JAR INTELLIGENT CART SOLUTIONS

OWNER'S MANUAL

VERSION 3.0 | SB-5XXXB, SB-63XXB



THANK YOU!

JAR Systems, LLC has now been designing and manufacturing mobile solutions for education and training for more than ten years! We've grown a lot since our inception and it's been highly rewarding to see that some of the first carts that we ever sold are still being used in schools across the country.

Our mission has always been to seamlessly integrate IT hardware and software for a more enjoyable and truly unique teaching and learning experience. We aim to innovate higher quality, easier to use, more effective charging and storage solutions and every satisfied customer is measure of our success in pursuing this mission. So, we would like to say, "Thank You!" for your purchase and continued support.


"We aim to innovate higher quality, easier to use, more effective charging and storage solutions"

MANUAL CONTENTS

Before First Use	03
Transportation	
Setup and General Tips	
General Safety Advice	04
Quick Tour	05
Components & Care	06
Included Components	
Cleaning the Mobile Cart Enclosure	
Wiring Instructions and Setup	07
Removing Trays	
Network Switch Instructions	
A/C Adapter Instructions	
Securing Cables to Trays	
Intelligent Charging System	10
Power Up Sequence	
Charging of Devices	
Printer/AUX Devices	
Management Mode	
Distributing and Returning Devices	13
Distributing Devices	
Returning Devices	
Connecting to an External Network	
Frequently Asked Questions	15
Technical Specifications	17
Warranty Information	18

BEFORE FIRST USE

Transportation

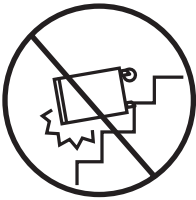

- Close and lock all doors before moving the JAR Intelligent Cart Solution.
- Before transport, unplug the power cord from the wall outlet and from the mobile cart.
- Never move the mobile cart on your own. Always transport the cart with a second person who is physically able to assist.
- Never attempt to transport the mobile cart over steps. Use elevators or ramps.
- Before moving the mobile cart, release the brake latches on both of the front wheels.
- Push, do not pull the cart to move it.
- Only when all of the above conditions have been met will the mobile cart be safe to transport over even surfaces.



Setup and General Tips

- Connect the JAR Intelligent Cart Solution to a properly installed 120V 15A power outlet only. It is recommended that you have a qualified electrician test the circuit before you plug the mobile cart in for use.
- Do not plug the JAR Intelligent Cart Solution into a power outlet if the power cord, power strips, or any other cable is damaged or shows signs of wear or misuse. Repairs should be made only by a qualified electrician.
- Ensure that the power cable lies flat on the floor to minimize the risk of tripping or falling.
- Connect devices and their equipment to the JAR Intelligent Cart Solution only via the supplied power strips, located inside the rear of the cart.
- Always lock both the rear and front doors when the JAR Intelligent Cart Solution is not in use. This will prevent unauthorized access to the equipment.
- Store the JAR Intelligent Cart Solution in a cool, dry area and avoid exposure to direct sunlight at all times.

GENERAL SAFETY ADVICE

PLEASE READ AND OBSERVE ALL INSTRUCTIONS

Before operating your mobile cart for the first time, read these important guidelines. It is important that these guidelines are followed to prevent personal injury or damage to the equipment.



- Before using the JAR Intelligent Cart Solution, please read and observe all operating instructions of the equipment you will be using in combination with the mobile cart.
- Do not use the JAR Intelligent Cart Solution for anything other than charging or storing mobile devices. Keep food and drinks away from the cart at all times.
- Do not use an extension cord with this or any other mobile cart.
- Unplug the JAR Intelligent Cart Solution from the power outlet when it has finished charging. This mobile cart should only be connected to the power outlet with the intent of charging laptops inside the cart.
- Children are often unaware of hazards associated with electrical devices and the JAR Intelligent Cart Solution must, therefore, always be used by an adult or with adult supervision.
- Do not allow anyone to sit, stand, or climb on the cart..
- Do not attempt to lift the cart.
- Do not block fans or vent openings.

QUICK TOUR


The illustrations below show the parts of the standard JAR Intelligent Cart Solution and the terms that are used for these parts throughout this user manual.

Intelligent Charging System

Pull-Out Trays


Lockable Sliding Doors

5" Locking Caster

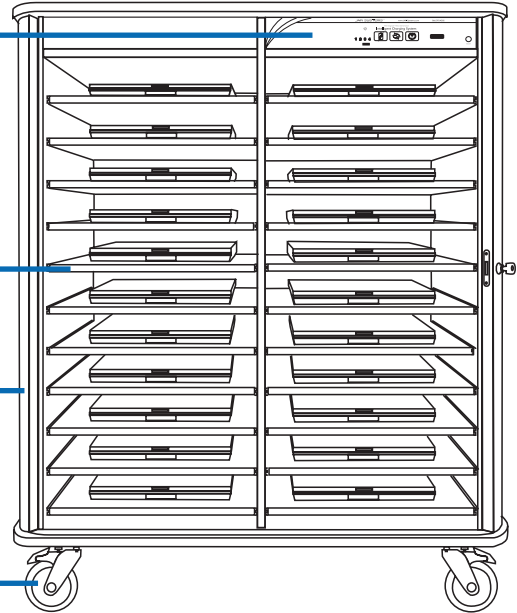

FRONT VIEW OF CART


Power Strips

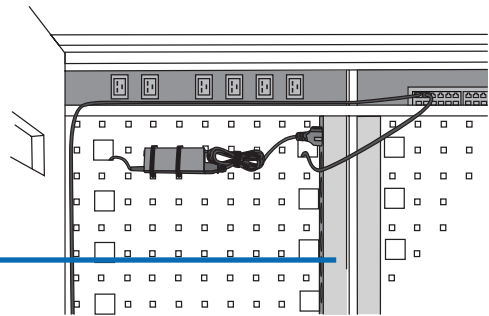

REAR, TOP LEFT VIEW OF CART

Serial Number and Product Information

Main Power Connection


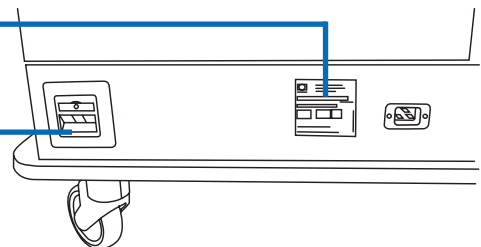


REAR, BOTTOM LEFT VIEW OF CART

COMPONENTS & CARE

Included

- Mobile cart enclosure
- Power cord
- Intelligent Charging System
- Four keys—Two for front doors and two for back doors
- Wiring accessories—Velcro ties, cable ties, and cable clips

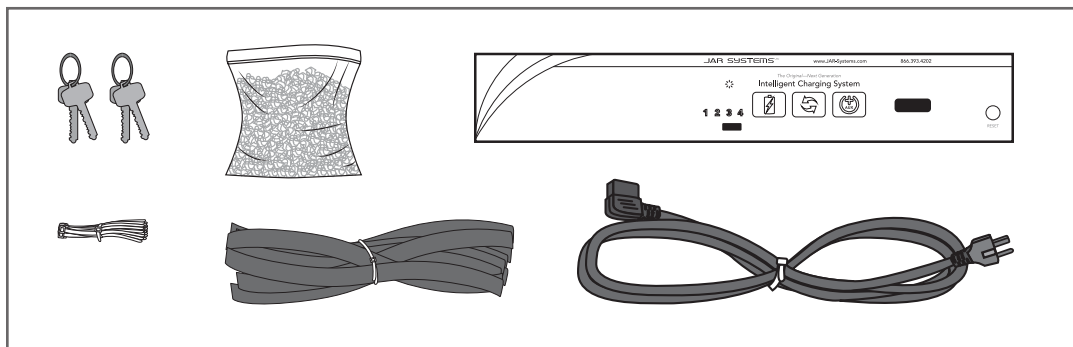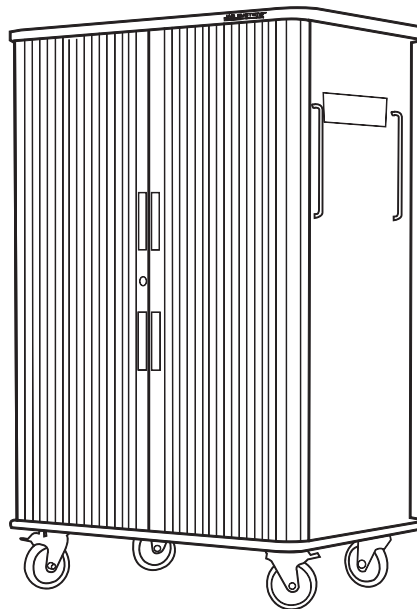

Cleaning the Mobile Cart Enclosure


Before starting any cleaning, ensure that the JAR Intelligent Cart Solution is switched off and that the power plug and cable are removed from the power outlet.

Clean the JAR Intelligent Cart Solution with a dry cloth or with mild detergent. **Do not use cleaning agents containing organic solvents such as alcohol or acetone.**


WIRING INSTRUCTIONS

This guide is intended as a reference point for wiring a JAR Intelligent Cart Solution, however, scenarios may vary based on particular device specifications and needs. It is recommended that you start with a sample tray setup and adjust it until it performs with your devices as needed. After that, the sample tray setup can be quickly replicated for the remaining trays and carts.


(a) SIDE VIEW OF CART

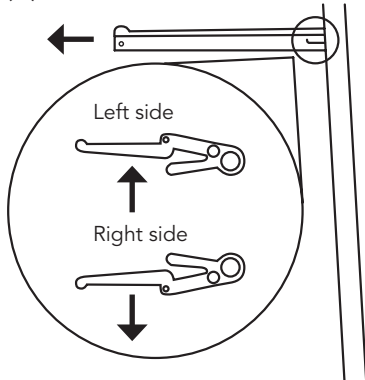

(b) REAR, TOP RIGHT VIEW OF CART

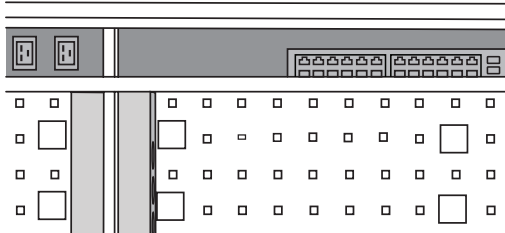

(c) REAR, TOP RIGHT VIEW OF CAT

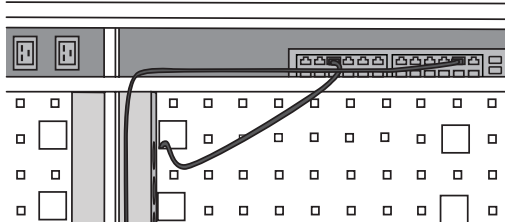

Removing Trays

1. Release levers are located inside the tracks on both the left and right sides of the tray. To remove the tray, pull the left lever up and press the right lever down, while pulling the tray away from the cart (a).
2. Set the trays aside for later use.


Network Switch Installation

1. A network switch may be installed in the rear, top right of the cart, parallel to the Intelligent Charging System. Install it to face the back of the cart (b).
2. Use the screws or mounting brackets that accompany the switch to affix it to the cart.
3. The power cable of the switch may be plugged into the AUX power strip, which is labeled and located inside the rear of the cart.
4. Plug CAT5 network cables into the appropriate slots of the network switch to allow external LAN outlets to connect the cart to the network.
5. Plug one network cable per each device into the network switch. Run them down the center of the cart, assigning one cable to each pull-out tray. Feed each cable through the openings to the front of the cart to later secure them to the trays (c).

A/C Adapter Installation

1. Starting from the bottom up, attach each A/C adapter with a velcro strip to the back panel (d).
2. Feed the A/C adapter power cables for the devices all the way through to the inside of the cart. Use the network cables as a guide. Set the A/C adapter wall plugs aside for now (d).
3. Affix both cables to the back panel with a cable tie. Use either the left or right small mounting hole, located next to the cables (d).


(d) REAR, BOTTOM LEFT VIEW OF CART

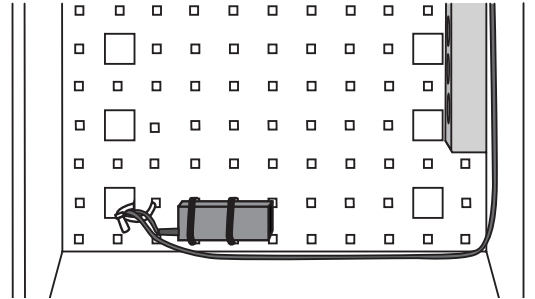

Securing Cables to Trays


1. Feed the A/C adapter power cable and the network cable through the corresponding clip that is located on the wall of the cart. Tighten by pulling the cable tie that is already attached to the clip. There should not be any tension on the cables (e).
3. Combine the A/C adapter power cable with the network cable (if applicable) by tying a cable tie around them. Do this once half way between the cable clip and back panel and again between the wall clip and fully pulled out tray (e).
4. Attach a cable clip to the pull-out tray sideways, so that the cables can run through it. Line it up with the back of the tray and leave space to the left of it. This space will allow the cables to slide when the pull-out tray is pushed in or pulled out (f).

(e) FRONT, BOTTOM LEFT VIEW OF CART

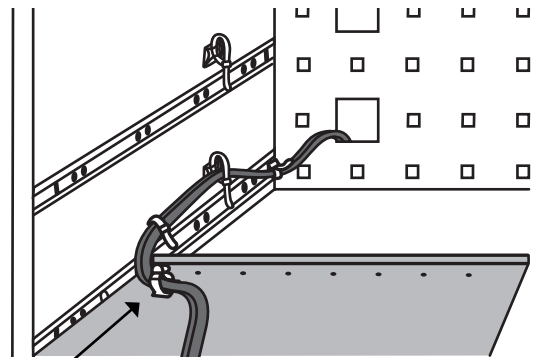

(f)

(g) REAR, BOTTOM LEFT VIEW OF CART

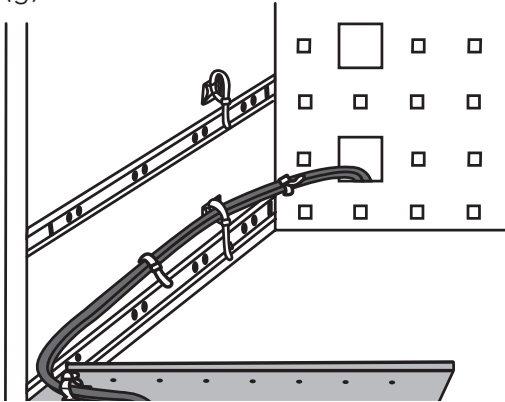


5. The cables should extend forwards when the tray is pulled out (g).
6. The cables should retract when the tray is pushed back into the cart (h).

IMPORTANT

When the pull-out tray is pulled out there should be no tension on the cable clips, otherwise the cable clips will be pulled off and the cart might have to be re-wired.


(h) REAR, BOTTOM LEFT VIEW OF CART

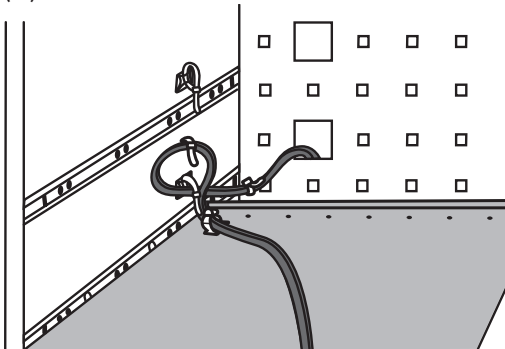

Final Steps


1. Locate the network and power connector on your devices and determine the best way to position them on each tray.
2. Once you have determined the ideal way to position the devices, attach additional cable clips on the tray and use cable ties to ensure that the cables remain in the appropriate spots.
3. Attach the A/C adapter wall plugs to the A/C adapters and use cable ties to attach the cables to the back panel (i).
4. Plug the A/C adapter wall plugs into the power strips inside the cart. Start with the first outlet from the bottom up (i).

(i) REAR, BOTTOM LEFT VIEW OF CART

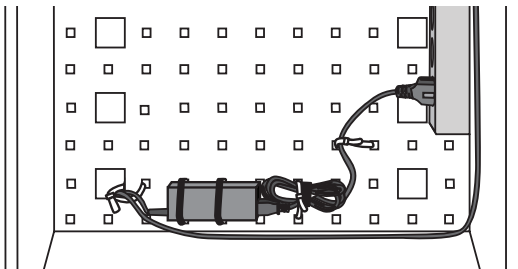

THE INTELLIGENT CHARGING SYSTEM

Charging and managing multiple devices has never been this easy. This powerful, yet easy to use charging system gives teachers and IT coordinators full control of their cart. No more tripping of circuit breakers, multiple power cords for one cart, or uncharged devices. Best of all, it even improves the battery life of the devices!

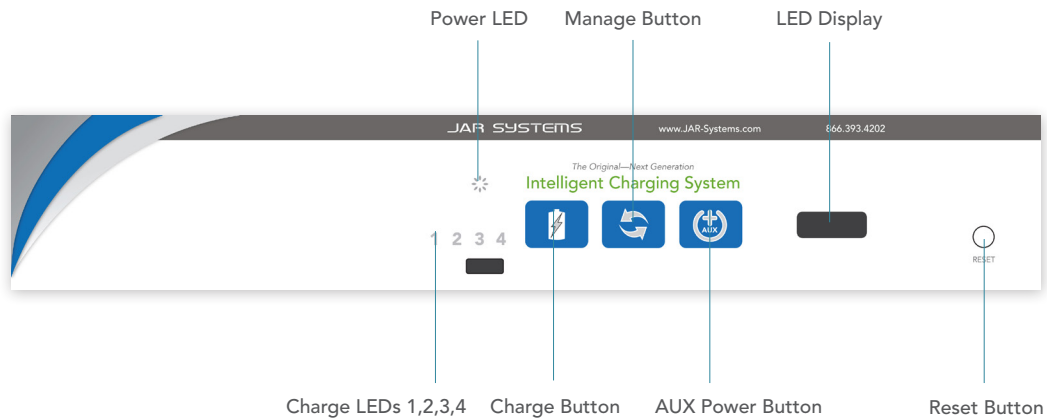

Power Up Sequence

1. Connect the main power cord to the cart's power connection found on the right side of the cart, near the bottom, toward the back.
2. Connect the power cord of the mobile cart to a 15A standard wall power outlet.

You will hear a short beep to notify you that the charging system is starting up.

During the start up process you will notice that all LEDs on the power unit will flash.

After about five seconds the unit is operational, which will be indicated by the illuminated **Power LED**.

The **Power LED** is located in the center of the power unit (see picture above).

This light will remain on when the cart is plugged in to indicate to the user that the cart is receiving power and is ready for use.





Charging of Devices

A) Start Charging

1. Once the cart is powered on, press the **Charge Button**.

The LED in the **Charge Button** will light up and charging has started.

The four **Charging Quadrant LEDs (1,2,3,4)** will indicate which power strip is currently active.

In charging mode you might see any combination of 1,2,3 or all 4 flashing simultaneously.

The power unit will control this charging process automatically and ensure that all devices inside the cart are charged the quickest and most efficient way possible. No user input required.

B) When Charging is Complete

When the charging process is complete, all four (4) **Charging Quadrant LEDs** above the **Charge Button** will be solid green and flash in a sequence from right to left every two seconds.

At this point, all devices are completely charged and power to all power strips has been turned off. You are now ready to use all of your devices.

C) Restart Charging

1. To start charging again, press the **Charge Button** once to clear the LED screen.
2. Press the **Charge Button** a second time to be charging.

D) Stop Charging at Any Time

1. Press the **Charge Button** to turn the system off at any time during the charging sequence.

The system will stop charging all devices. It is now safe to disconnect the power cord.

To resume charging, simply press the **Charge Button** again.

Printer/AUX Devices



A) Turn On Printer/AUX Devices

1. Connect auxiliary devices to the AUX power strip found inside the back of the cart.
2. Follow the instructions found under POWER UP SEQUENCE.

The blue **Power LED** will indicate that the cart is ready.

3. Press the **AUX Power Button**.

The **AUX Power Button** will light up.

1 2 3 4

This will turn on all devices connected to the AUX power strip found inside the back of the cart.

This button will only be operational when charging has not yet started.

This button cannot be pressed if charging has started. However, if you require devices to be on while charging the devices you can press this button before initiating a charging cycle. Doing so might increase the time needed to charge the devices.

B) Turn Off Printer/AUX Devices

1. Press the **AUX Power Button**.

The LED will turn off and all devices attached to the AUX power strip will power down.

Management Mode

A) Start Management Mode

1. Follow the instructions found under POWER UP SEQUENCE.

The blue **Power LED** will indicate that the cart is ready.

2. Press the **Manage Button**.

The LED in the **Manage Button** will light up as well as the **AUX Power Button**.

The first step in enabling the notebooks inside the cart to be remotely managed is to ensure that they are charged. Therefore, the cart will first evaluate the state of all notebooks and if necessary, charge the notebooks. No user input required.

After all notebooks are properly charged, the cart will turn on the network switch that is connected to the AUX power strip found in the back of the cart and will activate all notebook power strips to ensure that the notebooks receive power. This will enable a select group of notebooks to receive the WoL signal via the installed network switch. Please keep in mind that this will require additional software i.e. Altiris, HP Client Manager, etc.

B) Stop Management Mode

1. Press the **Manage Button**.

The LED will turn off and the cart will go into standby.

For more information on how the system works in general and why it charges the notebooks quicker, please see Frequently Asked Questions or call us at (866) 393 4202.



DISTRIBUTING & RETURNING DEVICES

During training sessions or classes, device operation is cordless. Power is supplied by the charged batteries. Please refer to device documentation for accurate information on battery operating times.

Distributing Devices

1. Open both sliding doors in the front of the cart.
2. Pull out a single pull-out tray.
3. Remove the power plug from the device.
4. Release the network cable, if applicable.
5. Take hold of the device with both hands and remove it from the tray.
6. Place the device on the student's desk.
7. Turn on the device.
8. Push the pull-out tray back into the cart.

The devices are now ready for use. Please bear in mind that the devices need to be recharged for use in the next instruction/training unit.

The use of the mobile cart, including plugging in or unplugging devices, plugging in or unplugging the main power cord, operating the power button, or engaging or releasing the caster locks, must be done with adult supervision.

Only pull out one pull-out tray at a time. Immediately after removing the device from the tray and placing it on a solid surface, push the tray back into the cart.


Never pull more than one tray out of the mobile cart at a time.

Always load the cart from the bottom up. Do not load anything but your devices on a tray.

Observe the maximum loading capacity of this mobile cart. Never load a printer onto a tray.

Do not put anything on top of the cart.

FRONT VIEW OF CART

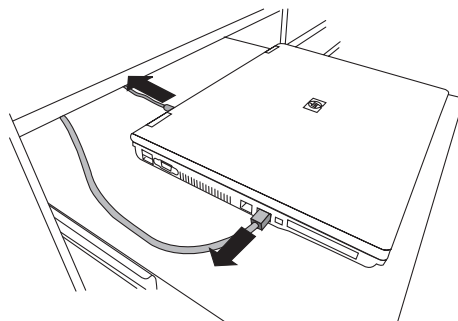

Returning Devices

After class, all devices should be returned to the JAR Intelligent Cart Solution.

1. Close all programs or applications and shut down each device.
2. Open both sliding doors of the JAR Intelligent Cart Solution.
3. Pull out a single pull-out tray.
4. Place the device on the tray.
5. Connect the power cable to the device.
6. Insert the network cable into the RJ 45 connector of the device, if applicable.
7. Push the pull-out tray back into the cart.


Ensure that both the power adapter and the network cable are securely plugged into the device, if applicable. Otherwise, the battery of the device will fail to charge and/or remote management of the device will not be possible via the network.

Connecting to an External Network


If your location has a local area network, you can link the JAR Intelligent Cart Solution to the network via one of the two network sockets (RJ 45) on the bottom left side of the unit. Because devices are directly linked to the network, they can be serviced centrally by a system administrator through the network.

1. Pull down the cover of the RJ-45 socket.
2. Plug one end of the network cable into the RJ 45 socket of the JAR Intelligent Cart Solution.
3. Connect the other end of the network cable to your external network connection.

FRONT VIEW OF CART

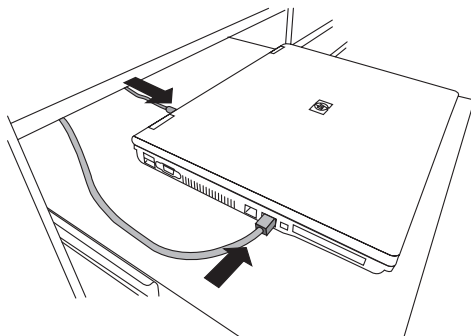

REAR, BOTTOM LEFT VIEW OF CART

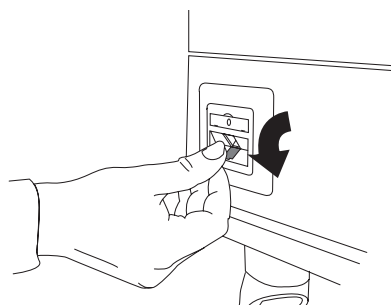

FREQUENTLY ASKED QUESTIONS

What type of warranty comes with the cart?

All of our carts come with a warranty that covers the entire cart, including the electrical components and Intelligent Charging System for 5 years (power cord excluded). If you are in need of service, simply contact your local reseller or call us at (866) 393-4202. We are here to help. More warranty information can be found inside the back cover of this manual.

Can I extend this warranty?

Yes, the original purchaser has the option to extend the warranty on each cart purchase at any time during the standard warranty period.

How much weight is supported on each pull-out tray?

Our high-quality ball bearing slides are made to last and support up to 16 lbs of weight per tray. They will easily support any mobile computing device available on the market.

How much room is on each pull-out tray?

Our trays are 410mm D x 363mm W x 90mm H or 16.14" D x 14.29" W x 3.54" H with exception of the SB-6310B cart trays, which are 20" D x 14.29" W x 2" H. In short, 99.9% of all devices used for teaching and training will fit on our pull-out trays. Smaller devices can typically be doubled up on the trays and therefore you are able to fit more devices (up to 36) into a cart with a smaller footprint.

Where can I store a printer?

Our SB-5300B, SB-5345B, and SB-5900B carts are designed to accommodate a securely mounted printer on top of the cart. A printer can be installed inside the SB-5400B cart if you remove trays to make room. Because weight is always a concern for teachers and users, and printing is only used 20% of the time the cart is used, we recommend that printers are not moved with the cart. Make them available via the network in strategic locations throughout the building and you will be a hero. Lighter carts will get used more.

How does the Intelligent Charging System work?

The Intelligent Charging System is the fastest, most efficient way to charge multiple devices with their A/C adapters. Our system does not use any pre-defined timers that cycle blindly between two power strips of 15 devices each for a pre-defined time frame. This method takes way too long to charge devices—and that is not what you need.

Every time you press the charge button in our cart, the system evaluates the battery status of all devices inside the cart and charges them the quickest way possible. It continues to monitor the charging and adjust immediately to a change in configuration. Power sensors and many lines of code help the system to continuously improve the charging of all devices.

Even better, we designed the system to easily be updated and improved. So when that ultra-thin, pocket-size, hybrid powered foldable netpad comes around you are ready with a cart solution to charge it.

What are the benefits of the Intelligent Charging System?

Well, that one is easy. Devices are charged quicker and therefore you can use them more often. This in return will not only make the students happy but also administrators because it increases the availability of your devices for class time instruction.

This also allows teachers to stop worrying about the cart and concentrate on their curriculum and how best to utilize the devices to improve student learning.

Can I automate charging or remote management?

Yes, you can. Our system can be configured to automatically start when the user plugs in the cart. This further simplifies the use of the cart by removing the need to press the charging button at the end of the day. Please contact us at (866) 393-4202 to discuss your options.

How do I reset the circuit breaker?

In the unlikely event that our Intelligent Charging System encounters any issues beyond regular use, i.e. somebody misuses the cart by plugging in unsupported devices, our system is protected by its own circuit breaker. The circuit breaker is the little black button on the front of the unit. It will trip and pop out, protecting the unit. Simply press it back in to reset and use the cart again. Before you do, however, please consult the manual and ensure everything is plugged in properly and no unsupported devices are connected to the cart.



Have more questions?

Give us a call at (866) 393-4202 or visit our website www.JAR-Systems.com for product information and specials.

TECHNICAL SPECIFICATIONS

Tray Dimensions SB-5XXXX

Width	363mm	14.29"
Depth	410mm	16.14"

Tray Dimensions SB-6310B

Width	369mm	14.5"
Depth	510mm	20"
Height	47mm	2"

Power Connection

Input voltage: 120 V AC (+- 10%)

Input frequency: 60 Hz

Operating Environment

Temperature range: 5-40° C

Air humidity: 20-80% rel. air humidity, non-condensing

Storage

Temperature range: -10 to 50° C

Air humidity: 5-80% rel. air humidity, non-condensing

WARRANTY INFORMATION

This warranty covers any defects in material or workmanship in this mobile cart. This warranty extends to the original consumer of the product only. The warranty lasts for five years from date of purchase for the entire mobile cart (excluding the power cord). JAR Systems LLC will replace the product with a new or refurbished product, repair the product, send replacement parts, or refund the purchase price you paid for the product, at JAR Systems LLC's discretion. This warranty does not cover a product that has been damaged by accident, unreasonable use, neglect, tampering or other causes not arising from defects in material or workmanship.

ANY IMPLIED WARRANTIES LAST ONLY AS LONG AS THE WARRANTY PERIODS LISTED ABOVE. This includes but is not limited to the implied warranties of merchantability and fitness. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you. **JAR SYSTEMS LLC'S RESPONSIBILITY IS LIMITED TO THE ACTIONS LISTED ABOVE AND NOTHING ELSE.**

This warranty does not cover, and JAR Systems LLC will not be responsible for, any damages you may have due to loss of use of the product, or any other costs or expenses incurred by you or anyone else who uses the product, whether due to defects, breach of contract, negligence, strict liability or otherwise. **JAR SYSTEMS IS NOT LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RELATED TO THE PRODUCT OR THIS WARRANTY.** Some states do not allow the exclusion or limitations or consequential or incidental damages, so these limitations or exclusions may not apply to you.

If you have any questions about this warranty or the products please call us at 1-866-393-4202.

This warranty gives you specific legal rights and you may also have other rights that vary from state to state. This warranty is governed by the laws of Florida, excluding its conflict of laws principles, unless your state requires that its law be used.

PLEASE REGISTER YOUR JAR INTELLIGENT CART SOLUTION ONLINE.

www.JAR-Systems.com/Support/Product-Registration



At JAR Systems it is our singular focus to create the best charging and storage solutions for mobile devices. Benefitting from over 10 years of industry experience, we stand behind our products with our five-year warranty and excellence in customer service. If you are ever in need of service, simply contact your local reseller or call us at (866)393-4202.

JAR SYSTEMS^{LLC}
mobile solutions for education and training

PO Box 75 | Tallevast, FL | 34270 | USA

Tel: (866) 393 4202 | Fax: (941) 870 4859

www.JAR-Systems.com