

# How to Best Remove Charging Cables from a JAR Cart or Station

*These general instructions apply to a range of Ultra-Light Intelligent Carts, the Essential Charging Stations, and Flex-Share Charging Stations.*

Cart models: MD-5150, MD-5135, MD-5130, MD-5140, MD-5143  
Station models: CS-1610, CS-1210, CSE-1615, CSEM-1615-2U

## Contact JAR Systems for Additional Support

**Required Tools:** T25H Torx key **(A)** or drill bit.  
Note: If the cable compartments are not secured shut, this tool may not be needed.



### 1. Remove devices from the cart or station.

### 2. Unplug the charging cables from the power strip(s).

All of the cart models feature removable back panels **(B)** that can make this step easier, however the chargers can also be unplugged from the power strips by reaching through the front of the cart without removing the back panels. Panels can be removed using the T25 torx key.



### 3. Remove security screw from the tray lid(s) if it is in place.

The security screw is located in the middle of the lid of each cable compartment. The screw can be removed with the T25H Torx key that was included with the product **(C)**, or if you have many carts or stations to work on at once, you may want to get a T25H Torx drill bit.



4. Prop the tray lid open by placing the screw in the hole in the side wall of the cart or station **(D)** and assess how the cables have been bundled together below.

In most cases, each individual charger will be bundled on itself **(E)**. In some cases, sections of cables may have been zip-tied or velcroed together. Chargers with no AC adapter like tablet chargers may also be bundled together using a special clip that is secured to the cable management tray. To release the cables from these clips, simply press down on the tab on the back **(F)**.

5. Once you have removed anything that may be tying the cables to each other, you should be able to remove and separate the cables.

